


**GENERAL PURPOSE SHIPPER** 

# HIGH VOLUME SHIPMENT: UNLOADING NON-INFECTIOUS SAMPLES

## **SECTION A**


#### **RECEIVING SHIPPER**

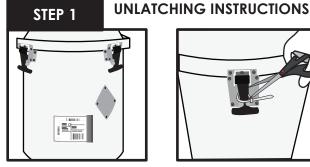

Once the shipper has arrived, remove old shipping pouch and zip-ties.



Remove zip-ties from both black handles with scissors.

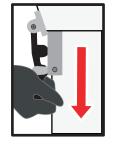

Unlatch both sides by pulling black handle down & away from the shipper.



Open lid to expose the dewar.


## **SECTION B**

## UNLOADING SAMPLES FROM SHIPMENT






Cut off the zip tie on the hinged cap with scissors.

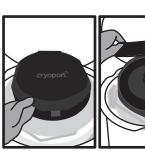

Open the hinged cap by pulling up on one of the two lift handles on the lid. With gloved hands, pull up on the circular handle in the center of the vapor plug to remove the vapor plug. Set the vapor plug aside.

**PACKAGING THE SHIPMENT** 

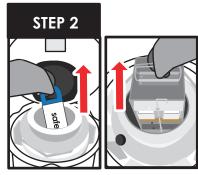

With gloved hands, remove the loaded commodity by pulling upwards.



Place any returnable accessories back into the dry shipper.

# **SECTION C**



Replace the vapor

plug.



STEP 2

Close the hinged cap by pulling down on the lid.



Secure the hinged cap with a zip tie.



Remove the Leg 3 shipping pouch from the document protector attached to the dewar handle inside of the container.



Remove the EMPTY label from the shipping pouch and place on the metal diamond.

IF THE DRY SHIPPER DOES NOT EMIT VAPOR WHEN PLUG IS REMOVED PLEASE CONTACT CUSTOMER SERVICE IMMEDIATELY, BY CALLING (949) 470-2305 OR EMAIL CS@CRYOPORT.COM



**GENERAL PURPOSE SHIPPER** 

# HIGH VOLUME SHIPMENT: UNLOADING NON-INFECTIOUS SAMPLES

# **SECTION C**

# PACKAGING THE SHIPMENT (CONTINUED)



Sign and date.




Return all documents being shipped behind the Air Waybill Including any: Permits, Forms, Licenses, etc.

STEP 7	Once

Close the shipping pouch and remove sticker backing.

all documents are loaded:

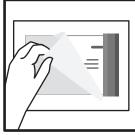

Place shipping pouch on the enclosure's metal plate.



Close the enclosure lid.

#### **STEP 8**





Latch handle on both sides by pulling the black handle down & then towards the shipper.

#### LATCHING INSTRUCTIONS



Insert zip-tie through one of the holes on the metal latch hardware.



Thread end of zip-tie through the hole on the other side of the metal hardware.



Insert zip-tie through the lid buckle and tighten.



Zip-tie is now securely around the black handle.

For those shipments containing regulated dangerous goods/hazardous materials, the shipper is responsible for correctly preparing the shipment according to the current International Air Transport Association (IATA) and International Civil Aviation Organization (ICAO) dangerous goods regulations.

This includes correct identification, classification, packaging, dangerous goods markings and labeling as well as completion of all pertinent and required documentation. The shipper is the customer who is preparing the shipment at each leg in the transportation of the dry dewar packaging.

24-hour Help Line (949) 470-2305

Cryoport, Inc. • 17305 Daimler St. • Irvine, CA 92614 Phone: 1-949-470-2300 | Fax: 1-949-470-2306 www.cryoport.com • e-mail contact: cs@cryoport.com